

COMMERCIAL-GRADE ELECTRIC MEAT GRINDER



COMMERCIAL-GRADE MEAT GRINDER MODELS:

0.4HP #8

3/4HP #12

1HP #22

1-1/2HP #32



WARNING!



To avoid serious or fatal injury, NEVER reach into any Grinder inlet. ALWAYS use the Stomper provided to push meat into the Grinder Head.

INTRODUCTION

- Thanks for using 1A-EG1-style stainless steel meat grinder. The appliance can be operated easier and more safer than other similar appliance.
- This instruction manual gives the customer all the necessary information about the appliance and the manufacturing standards applied, as well as all instructions for use and maintenance so that the appliance can be used correctly maintaining its efficiency in time.
- This instruction manual is for the end user and for service personnel
- In order to ensure the stability and safety of the production, the appliance has passed through dielectric voltage withstand test, earth resistance test, power leakage test and normal temperature test before leaving factory.

IMPORTANT SAFEGUARDS

When using electrical appliances, always follow basic safety precautions including the following:

1. **READ ALL NOPERATING INSTRUCTIONS AND PRODUCT SAFETY LABELS!**
2. **CHECK FOR DAMAGED PARTS:** Before using the Grinder, checks that all parts are operating properly and performing the intended functions. Check for alignment of moving parts, binding of moving parts, mounting and any other conditions that may affect the operation. If any parts, the **Power Cord** or the **Grinder** are damaged, call the Customer Service number shown in this manual.
3. Always unplug power cord from outlet when not in use, before putting on or taking off parts or accessories, and before cleaning. **After unplugging the unit, turn power switch ON, then OFF to ensure that all power has been discharged from the grinder.**
4. This appliance is NOT intended for use by children or by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge. This appliance is not to be used by children!
5. **NEVER LEAVE GRINDER UNATTENDED WHILE IT IS RUNNING!**
6. **ALWAYS USE THE PROVIDED STOMPER, NEVER FEED FOOD BY HAND. KEEP FINGERS CLEAR OF THE AUGER AND CUTTING BLADES AT ALL TIMES .NEVER REACH INTO THE GRINDER,** doing so may cause serious injury
7. Always keep the tray guard in place while operating (Note: tray guard is installed on #22, #32 models only)
8. **AVOID** contact with moving parts. **NEVER USE YOUR FINGERS TO SCRAPE FOOD AWAY FROM THE CUTTING BLADE WHILE IT IS IN OPERATION.** While the **Grinder** is in operation. **SEVERE INJURY MAY RESULT.**
9. **Wait until all moving parts have stopped and turn off power before removing any part from the grinder or before switching the grinder in reverse**
10. **TIE BACK** loose hair, clothing, or any loose object and roll up long sleeves before operating the **Grinder.**
11. **REMOVE** ties, rings, watches, bracelets, or other jewelry before operating the **Grinder.**
12. **DO NOT** operate **Grinder**, or any other electrical equipment, with a damaged cord or plug or after the unit malfunctions. **DO NOT ATTEMPT TO REPLACE THE CORD.** Call Customer Service to arrange to return the grinder for examination, repair, or adjustment
13. **DO NOT** use outdoors, this product is intended for **INDOOR USE ONLY**
14. **DO NOT** let cord hang over the edge of a table or counter, come into contact with sharp edges, or touch hot surfaces.
15. **DO NOT** let cord become kinked, trapped under unit or let it wind around the grinder
16. **DO NOT** pull the power cord to disconnect
17. **DO NOT USE WITH EXTENSION CORD.** Always plug directly into a grounded wall receptacle.



18. This grinder uses a grounded, three prong plug (hot, neutral and ground), that should be connected directly to a grounded 120 Volt, 60 Hz three prong grounded wall outlet receptacle. Grounded plugs are used on metal---encased electric appliances in order to provide protection from an electric shock. **DO NOT** change or alter the plug in any way. NEVER break off a grounding prong from a 3---conductor plug. Doing so voids the warranty and can result in electric shock.
19. Place the grinder on a firm and stable surface. Ensure that the grinder is not placed near the edge of the worktop, where it can be easily pushed off or fall.
20. NOT TOUCH these parts while operating.
21. DO NOT attempt to operate the **Grinder** if the **Grinder, Motor and Gear Box are cold. Grinder, Motor and Gear Box** temperature should be at least 45°F (7°C) before beginning.
22. To reduce the risk of unintentional starting, check that the control is Off before plugging the cord into wall outlet. To disconnect, turn the control to Off, then remove plug from wall outlet. DO NOT operate your grinder under a wall cabinet. When storing, always unplug the unit from the electrical outlet. Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.
24. NEVER plug the grinder in where water may flood the area.
25. To protect against risk of electrical shock, DO NOT submerge the grinder in water or other liquids. Be sure the grinder is disconnected from the power source before cleaning. NEVER rinse the grinder Motor under running water, only use a moist cloth to clean the Grinder Motor Unit.
26. DO NOT operate grinder with wet hands or while standing on a wet floor.
27. The use of attachments or parts not specifically recommended or sold by the manufacturer for this grinder will void the warranty and may cause fire, electric shock or injury
28. HAND WASH ALL PARTS! DO NOT USE DISHWASHER Never put the unit near a hot burner, in an oven, or in a dishwasher.
29. NEVER use abrasive cleaning agents or abrasive cloths when cleaning the grinder.
30. DO NOT use the grinder for other than intended use.
31. DO NOT RUN Grinder without meat in the Grinder Head. Severe damage to the Head and Auger may occur.
32. Never turn on and run the meat grinder for more than 10 seconds dry with no meat inside the machine. The friction between the auger and grinder head will result with high heat causing the meat to stick to the inside of the grinder assembly. NEVER OPERATE DRY. Damage from dry operation will void the warranty.
33. Be sure the **Grinder** is on a stable work surface. Be sure all the **Grinder Feet** are stable.
34. DO NOT attempt to grind bones, nuts or other hard items.
35. WEAR EYE PROTECTION. Wear safety glasses. Everyday eye glasses are not safety glasses. Safety glasses conform to ANSI Z87.1 requirements. Note: approved safety glasses have Z87 printed or stamped on them.
36. The Manufacturer disclaims any responsibility in the case of improper use of Grinder. Improper use of the Grinder voids the warranty.
37. DO NOT use Grinder while under influence of drugs or alcohol.

SAVE THESE INSTRUCTIONS

Refer to them every time you operate or

disassemble this product.

FOOD SAFETY

WHEN HANDLING FOOD, THE BASIC RULES TO FOLLOW ARE: COOK, SEPARATE CLEAN AND CHILL

COOK

It's crucial to cook food to a safe internal temperature to destroy bacteria that is present. The safety of hamburgers and other foods made with ground meat has been receiving a lot of attention lately, and with good reason. When meat is ground, the bacteria present on the surface are mixed throughout the ground mixture. If this ground meat is not cooked to at least 160°F to 165°F (71°C to 74°C), bacteria will not be destroyed and there's a good chance you will get sick. Solid pieces of meat like steaks and chops don't have dangerous bacteria like E. coli on the inside, so they can be served more rare. Still, any beef cut should be cooked to an internal temperature of at least 145°F (63°C) (medium rare). The safe temperature for poultry is 180°F (82°C) and solid cuts of pork should be cooked to 160°F (71°C). Eggs should be thoroughly cooked too. If you are making a meringue or other recipe that uses uncooked eggs, buy specially pasteurized eggs or use prepared meringue powder.

SEPARATE

occurs when raw meats or eggs come in contact with foods that will be eaten uncooked. This is a major source of food poisoning. Always double-wrap raw meats and place them on the lowest shelf in the refrigerator so there is no way juices can drip onto fresh produce. Then use the raw meats within 1---2 days of purchase, or freeze for longer storage. Defrost frozen meats in the refrigerator, not on the counter. When grilling or cooking raw meats or fish, make sure to place the cooked meat on a clean platter. Don't use the same platter you used to carry the food out to the grill. Wash the utensils used in grilling after the food is turned for the last time on the grill, as well as spatulas and spoons used for stir---frying or turning meat as it cooks. Make sure to wash your hands after handling raw meats or raw eggs. Washing hands with soap and water, or using a pre---moistened antibacterial towelette is absolutely necessary after you have touched raw meat or raw eggs. Not washing hands and surfaces while cooking is a major cause of cross---contamination.

CLEAN

 
 
Wash your hands and work surfaces frequently when you are cooking. Washing with soap and warm water for at least 15 seconds, then dry with a paper towel.

CHILL

Chilling food is very important. The danger zone where bacteria multiply is between 40°F and 140°F (4°C and 6°C). Your refrigerator should be set to 40°F (4°C) or below; your freezer should be 0°F (---17°C) or below. Simple rule: serve hot foods hot, cold foods cold. Use chafing dishes or hot plates to keep food hot while serving. Use ice water baths to keep cold foods cold. Never let any food sit at room temperature for more than 2 hours --- 1 hour if the ambient temperature is 90°F (32°C) or above. When packing for a picnic, make sure the foods are already chilled when they go into the insulated hamper. The hamper won't chill food --- it just keeps food cold when properly packed with ice. Hot cooked foods should be placed in shallow containers and immediately refrigerated so they cool rapidly. Make sure to cover foods after they are cool.

NOTE: Special considerations must be made when using venison or other wild game, since it can become heavily contaminated during field dressing. Venison is often held at temperatures that could potentially allow bacteria to grow, such as when it is being transported. Refer to the USDA Meat and Poultry Department for further questions or information on meat and food safety.

IMPORTANT PRODUCT FEATURES YOU SHOULD KNOW

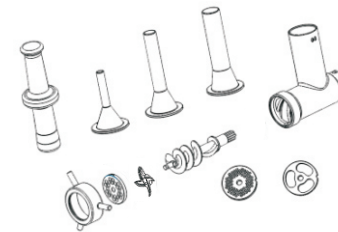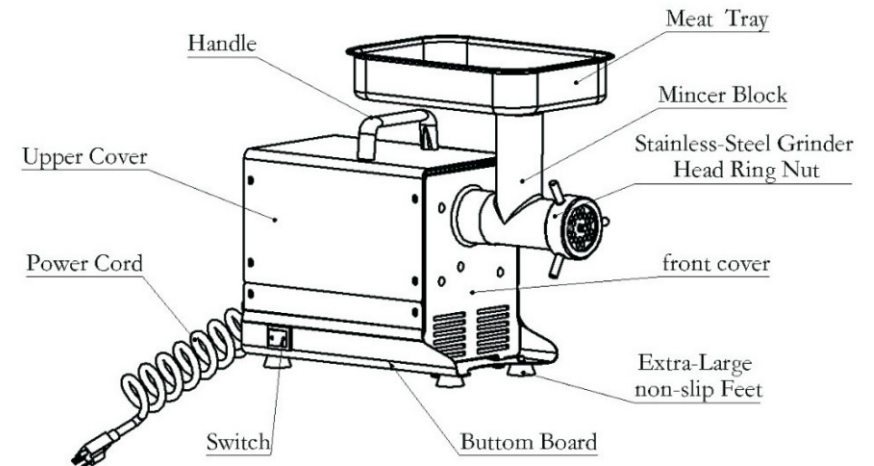

10mm-Coarse Grinder Plate
4.5mm-Fine Grinder plate
Sausage plate
15mm sausage stuffing tube
25mm sausage stuffing tube
35mm sausage stuffing tube
Knife
Front Ring Nut
Grinder Head
Meat stomper

IMPORTANT NOTICE: DO NOT REMOVE WARNING LABELS FROM THE GRINDER!
Doing so will void the product warranty and may result in serious personal injury.

TECHNICAL DATA

Model	Voltage				Power	Holes in disk	Sausage plate	Production: Max	Weight	Measurement
1A-EG108	120V/60Hz				0.4HP	4.5mm/10mm	yes	264BS/h	33.8LBS	490*220*416
1A-EG112					3/4HP	4.5mm/10mm	yes	396BS/h	44.4LBS	540*220*410
1A-EG122					1HP	4.5mm/10mm	yes	550BS/h	59.4LBS	645*310*490
1A-EG132					1-1/2HP	4.5mm/10mm	yes	880BS/h	67.1LBS	645*310*490

TECHNICAL CHARACTERISTICS

GROUNDING

This appliance must be grounded while in use to protect the operator from electrical shock. This grinder uses a grounded, three prong plug (Figure A) that should be connected directly to a grounded 120 Volt, 60 Hz three prong grounded wall outlet receptacle (Figure B). Grounded plugs are used on metal-encased electric appliances in order to provide protection from an electric shock. **DO NOT** change or alter the plug in any way. **NEVER** break off a grounding prong from a 3-conductor plug. Doing so voids the warranty and may result in electric shock.

Fig. A. 3-PRONG PLUG GROUNDING

Fig. B. GROUNDING WALL OUTLET RECEPTACLE

CLENING,MAINTENANCE&STORAGE

CLEANING INSTRUCTIONS

IMPORTANT: BEFORE CLEANING MAKE SURE THE POWER IS TURNED OFF AND THE UNIT IS UNPLUGGED. Disassemble the Grinder Head and wash parts that come in contact with meat thoroughly in hot soapy water, taking particular care to remove all grease and oil from surfaces. Rinse and dry all parts thoroughly before re---assembling.

1. Wash all parts that have come in contact with meat in hot soapy water. BE SURE TO CLEAN IMMEDIATELY AFTER USE. **DO NOT IMMERSE THE MOTOR IN WATER OR OTHER LIQUIDS!**
2. Rinse the **Grinder** parts with clear hot water, then dry them IMMEDIATELY.
3. Fully lubricate the **Head, Auger, Plates** and the **Knife** with a food-grade silicone spray before and after each use.
4. Clean the **Motor Cover** and **Gear Housing** with a damp towel and wipe dry. **DO NOT IMMERSE THE MOTOR IN WATER OR OTHER LIQUIDS!**

IMPORTANT: Any metal parts must be coated with a food-safe silicone spray to prevent rusting; if not properly protected, these parts will begin to rust very quickly.

DO NOT use rusted parts. Ordering information can be found on the last page of

WARNING!

To avoid serious or fatal injury, **NEVER** reach into any Grinder inlet. **ALWAYS** use the Stormper provided to push meat into the Grinder Head.

 
SAUSAGE STUFFING INSTRUCTIONS

WARNING! Before cleaning, assembling or disassembling the Grinder, make sure the **PLUG IS REMOVED FROM THE OUTLET POWER SOURCE! ALWAYS unplug the Grinder when not in use. After unplugging the unit, turn power switch ON, then OFF to ensure that all power has been discharged from the grinder.**

IMPORTANT: While one person can stuff sausage with this Grinder, it is recommended that two people perform this operation. One person to operate the grinder and push meat into the chute with the Stomper while the other person manages the output into the sausage casing.


TO BEGIN STUFFING:

1. Place seasoned ground meat into the **Meat Tray**. Do not overfill the **Tray**, place just enough meat to leave the **Feed Chute** area open. (Figure 1)
2. Slide a sausage casing over the **Stuffing Funnel**. (Figure 2)
3. Pull 4---6" (10---15 cm) of casing out at of the end of the **Stuffing Funnel Tube** and tie a knot in the end of the casing. (Figure 3).
4. Make sure the **Grinder** is in the "OFF" position. Attach the **Grinder** to the power supply.
5. Press Grinder "ON" button Carefully start feeding ground meat into the **Feed Chute**. ONLY USE THE STOMPER TO PUSH MEAT INTO THE HEAD, DO NOT USE YOUR FINGERS OR ANY OTHER OBJECT.
6. Hold the casing in place with one hand while feeding the sausage mixture through the **Grinder**. As the meat fills the casing, gently lay it on a clean, dry surface. (Figure 4)
7. Do not fill the last 4---6" (10 - 15.24 cm) of casing. After the entire length of casing has been stuffed, twist the open end to close, then tie off the ends of the casing tightly to close. Twist into links if desired.
8. Whenever stuffing sausage, fill the casing slowly to avoid air pockets. If air pockets do appear in the sausage use a pin to prick the bubbles. The small holes will seal naturally.

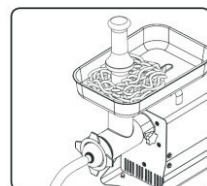

WARNING! NEVER RUN GRINDER DRY WITHOUT MEAT! It can cause damage to the unit ,Meat becomes a lubricant when passing through the grinder, if you run out of meat, trun the grinder off immediately

 GETTING TO KNOW YOUR CARNIVORE MEAT GRINDER

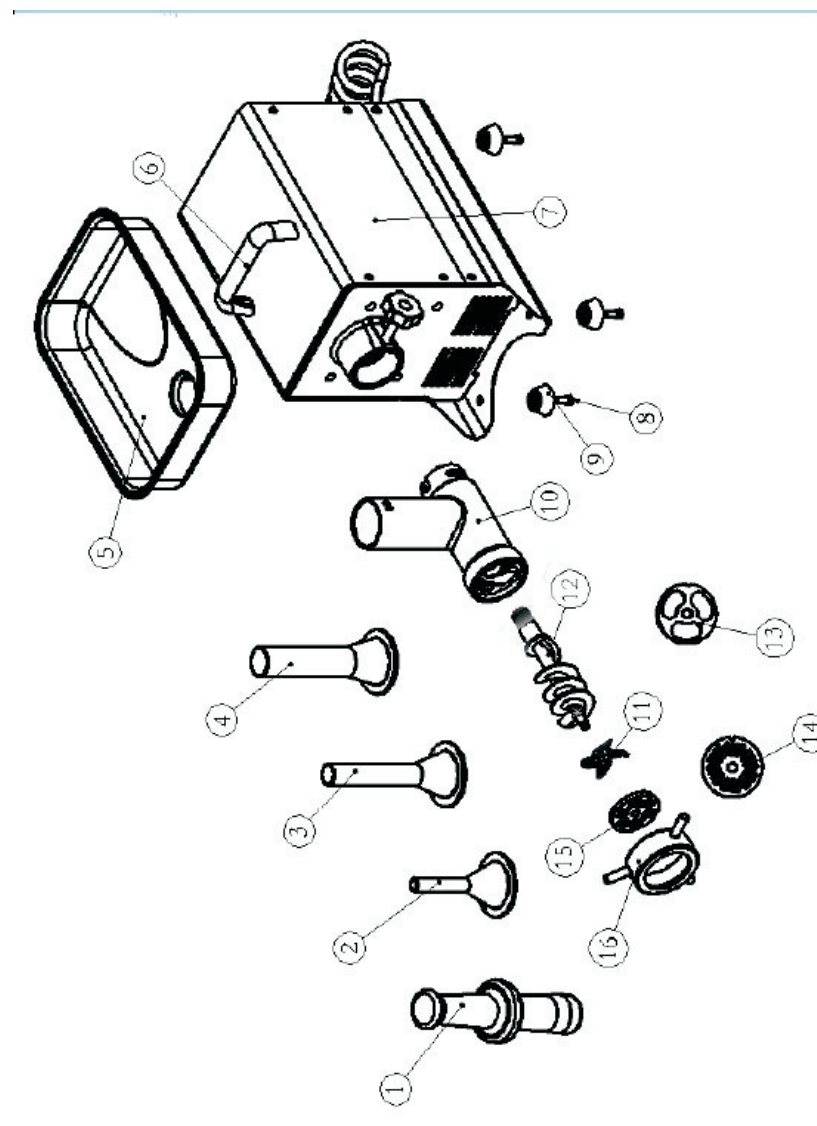

PART LIST

Part Description	1A-EG108	1A-EG112	1A-EG122	1A-EG132
1 MEAT STOMPER	EG112.F-02	EG112.F-02	EG112.F-02	EG112.F-02
2 15mm SAUSAGE STUFFING TUBER	EG108.F-03	EG112.F-03	EG122.F-03	EG132.F-03
3 25mm SAUSAGE STUFFING TUBER	EG108.F-04	EG112.F-04	EG122.F-04	EG132.F-04
4 35mm SAUSAGE STUFFING TUBER	EG108.F-05	EG112.F-05	EG122.F-05	EG132.F-05
5 MEAT TRAY	EG108.4-00	EG108.4-00	EG132.4-00	EG132.4-00
6 HANDLE	HT306 120*40	HT306 120*40	HT306 120*40	HT306 120*40
7 Motor house	EG108.1/2-00	EG112.1/2-00	EG122.1/2-00	EG132.1/2-00
8 NUT	GB70.1/M6*16	GB70.1/M6*16	GB70.1/M6*16	GB70.1/M6*16
9 RUBBER	EG112.1-06	EG112.1-06	EG112.1-06	EG112.1-06
10 HEAD	EG108.3-01	EG112.3-01	EG122.3-01	EG132.3-01
11 KNIFE	EG208.3-05	EG212.3-05	EG222.3-05	EG232.3-05
12 AUAGE	EG208.3-03	EG212.3-03	EG222.3-03	EG232.3-03
13 SAUSAGE PLATE	EG108.F-01	EG112.F-01	EG122.F-01	EG132.F-01
14 4.5mm MEAT PLATE	EG208.3-06F	EG212.3-06F	EG222.3-06F	EG232.3-06F
15 10mm MEAT PLATE	EG208.F-04	EG212.F-05	EG222.F-03	EG232.F-10
16 FRONT RING NUT	EG108.3-02	EG112.3-02	EG122.3-02	EG132.3-02

ASSEMBLING YOUR CARNIVORE MEAT GRINDER

IMPORTANT: BEFORE ASSEMBLING, MAKE SURE THE GRINDER IS NOT PLUGGED IN.

1. Loosen the **Black Grinder Head Locking Knob** until the threads are not exposed inside the **Motor Housing** opening and insert the **Grinder Head** into the **Motor Housing** with the **Feed Chute** facing straight up. Turn clockwise until the slot on the top of the **Grinder Head** aligns with the **Pin** inside the **Motor Housing**. Be sure the **Head** is seated fully into the **Motor Housing** (Figure 1). Tighten the **Grinder Head Locking Knob** to lock the **Grinder Head** into place. (Figure 2)

2. Insert the **Auger** by aligning the **Auger Spline** with the **Drive Shaft** of the **Grinder**. Slightly turn the auger clockwise until seats into gear housing. (Figure 3).

3. Place the **Cutting Knife** onto the square portion of the **Auger Pin**. (Figure 4). Note that the **Cutting Knife** is a **ONE---WAY---FIT** design that ensures that the flat side of the blade edges will face outward.

4. Place the **Grinder Plate** onto the **Auger Pin** and align the slotted notch in the **Grinder Plate** with the bottom notch in the **Grinder Head** opening. **NOTE:** The cutting plate will only fit one way and will protrude approx. 1/8" out of the grinder head) *NOTE: IT IS RECOMMENDED TO ALWAYS USE THE COARSE (10mm) PLATE FOR THE FIRST GRIND. (Figure 5).

5. **Attach Front Head Ring Nut** and turn the **Front Ring Nut** clockwise until it is snug against the **Grinder Plate**. (Figure 6).
6. Place the neck of the **Meat Tray** into the **Grinder Feed Chute** Opening and press down until secure. (Figure 7)