


ELECTRIC SAUSAGE STUFFER INSTRUCTION

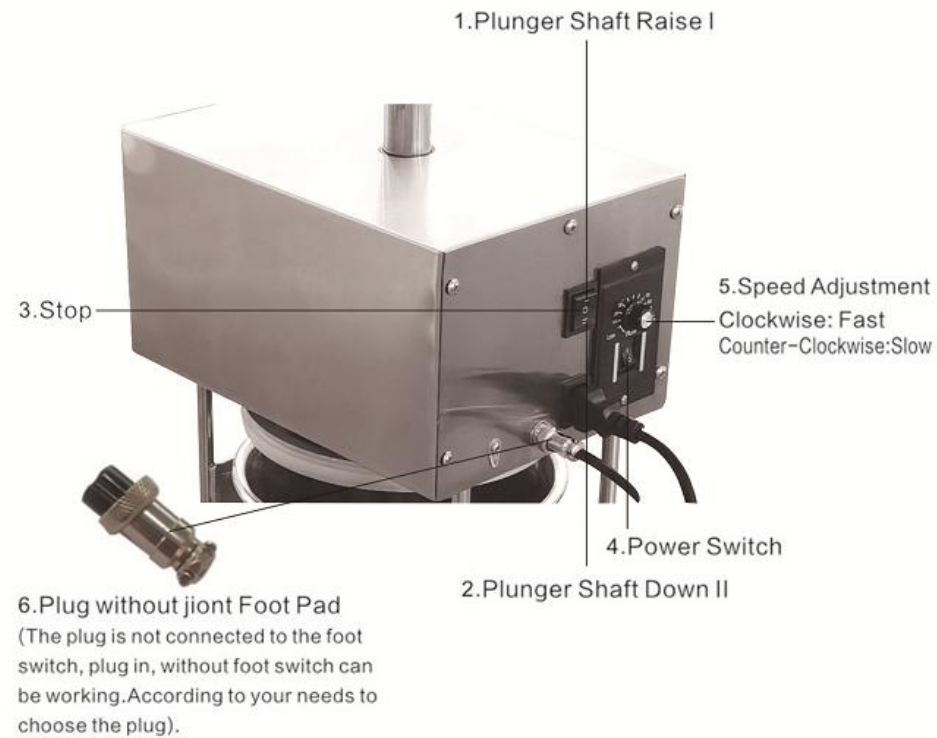

Important:

When using electrical appliances, basic safety precautions should always be followed as below:

1. Read all instruction before using this appliance.
2. Do not operate this appliance with a damaged cord, plug or malfunctions.
3. To protect against electrical shock, do not immerse foot switch, cord, plug or stuffer in water or other liquids.
4. This appliance is not intended for using by children.
5. Keep fingers and hands clear of all moving parts.
6. Unplug this appliance when not in use or before cleaning.

Technical Specification:

Model	Volume	Voltage	Frequency	Power
10L	10L	110V/220V~240V	50Hz/60Hz	200W
15L	15L	110V/220V~240V	50Hz/60Hz	260W
20L	20L	110V/220V~240V	50Hz/60Hz	300W
25L	25L	110V/220V~240V	50Hz/60Hz	350W
30L	30L	110V/220V~240V	50Hz/60Hz	400W

How to use:

1. Place the foot pad in a dry position.
2. Connect electrical power.
3. Turn reverse switch to UP, let the piston move to the top.
4. Tilt the cylinder and place meat in the cylinder
5. Place the cylinder back on to the frame.
6. Turn REVERSE switch to Down and push the foot pad, so the piston will start to come down.
7. If the piston is coming down too fast or too slow, use the speed switch(knob) to adjust to appropriate speed.
8. While filling the casing, remove your foot from the food pad and the piston will stop.

9. When the piston moves to the bottom of cylinder, the appliance will stop automatically. Then REVERSE switch to UP to raise the piston to the top.

10. Repeat above process starting at No.4 if necessary.

How to Clean:

1. Unplug the machine before cleaning.
2. Remove the cylinder, piston and stuffing tube. Hand wash with soapy water and dry thoroughly.

